


**SHORT CUTS recessed track kit

Assembly

Recessed Track Kit

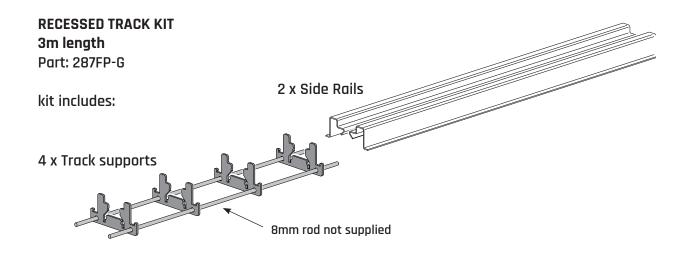

NOTE


- Kit only uses the 4mm Concrete-in Track below.
- Concrete-In Track & Track Joiner ordered seperately.




kit assembly

TIPS


- Check track supports, side rails & track for damage.
- File off any burrs from the side rails to assist with the assembly process.
- Feed 8mm rods through the track supports. Evenly space Track Supports along the 3m length will make assembly easier.

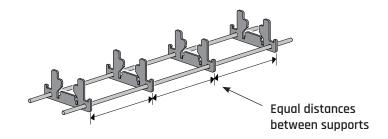


2 Slide track through the four Track Supports. The Supports may need a gentle tap into position during this process.

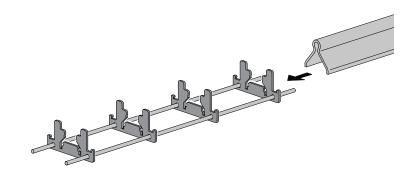

3 Slide the first Side Rail into place. Repeat with second Side Rail. If it jams, use a flat blade screwdriver and rubber mallet to gently tap track supports until it loosens.

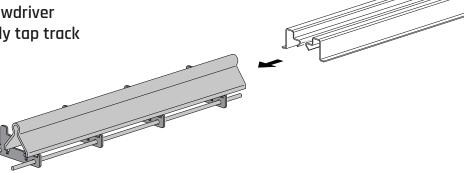

The kit is now fully assembled ready for install.

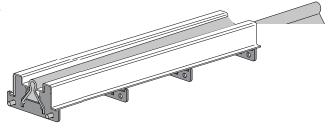

dimensions

